

How do I connect my dishwasher with the WASHSMART app?

www.washsmart.info



START




Please start your machine by pushing the round start button

1




Click on the menu symbol

2

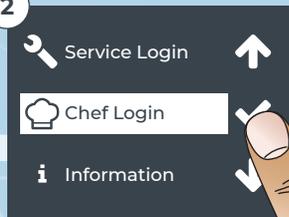


Select „Chef Login“


3

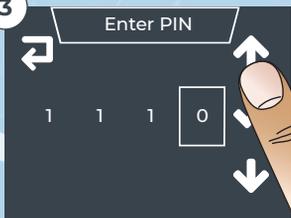

Please enter the PIN code „1111“ by clicking the upper arrow and confirming each „1“. This PIN code is valid for all machines and does not correspond to your personal PIN code.

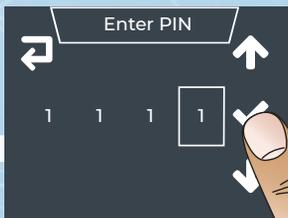

4

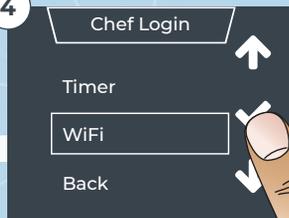


Now you are in the „Chef Login“ area. Please select „WiFi“.

5




Please select the menu item „Connection assistant“

6

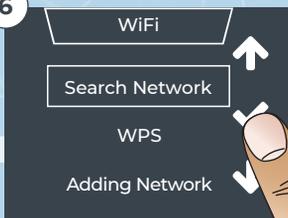


Now select „Search Network“ *

7

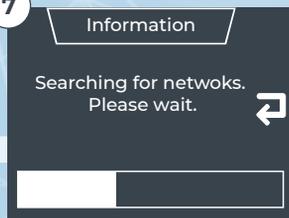


Your machine is searching for WiFi networks now


* Alternative: If you have a router that supports „WPS“, you can skip step no. 6 to 10 (insertion of WiFi password).

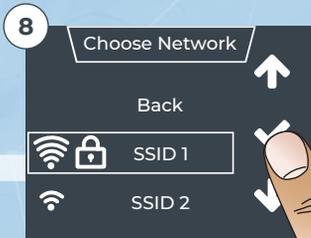


Please choose your WiFi network

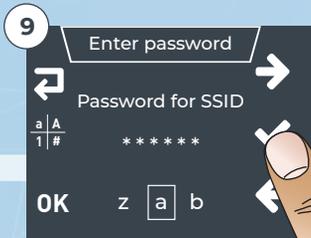


Enter and confirm your WiFi password or key

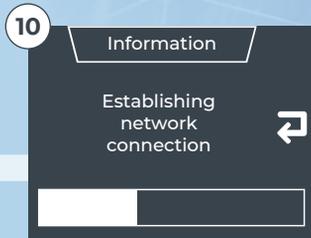


WiFi connection will be established. Please wait

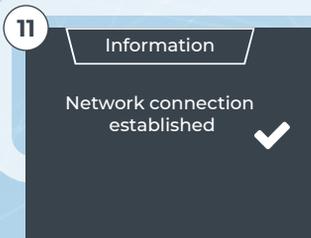



Confirmation of WiFi connection

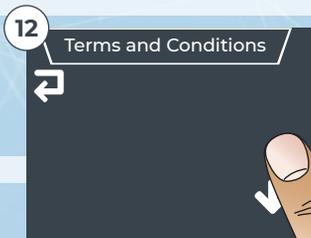

Please read and confirm the WASHSMART terms of use by scrolling down

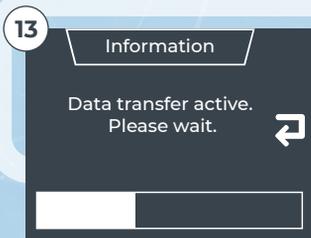

Only one more step:
Please enter the shown access code in your WASHSMART app

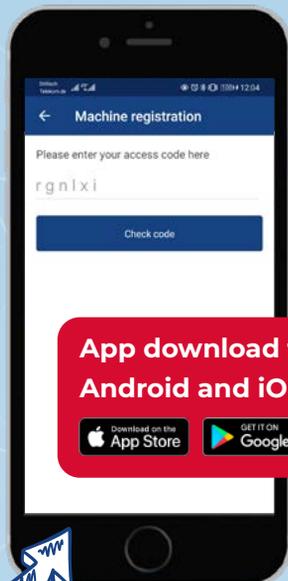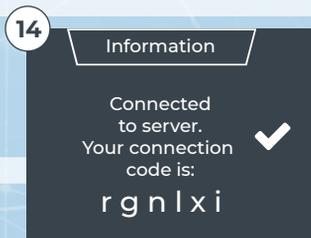

App download for Android and iOS:




DONE!

OPTIONAL

Connection via WPS:

The following steps replace steps 6 to 10

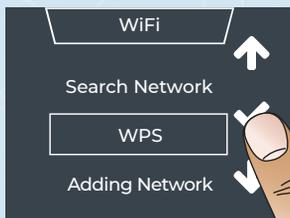

Do you need support? Our specialists are pleased to help you: Phone +44 844 888 7777